


Replic kit Instructions for use


Necessary equipment:

- Replic kit (20 Replic sheet 100 x 120 mm + 80 glass slides + 125 cc solvent) ref 19035

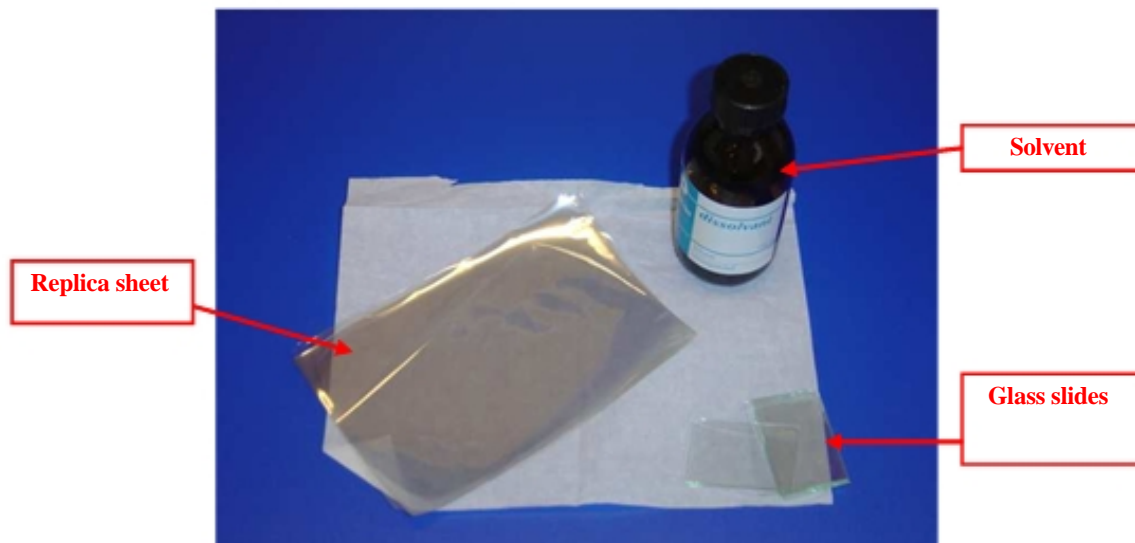

Using :

- Pour some drops of solvent on the surface to be observed.
- Put the Replic sheet so as to cover widely the area to be observed. Press strongly on the sheet :

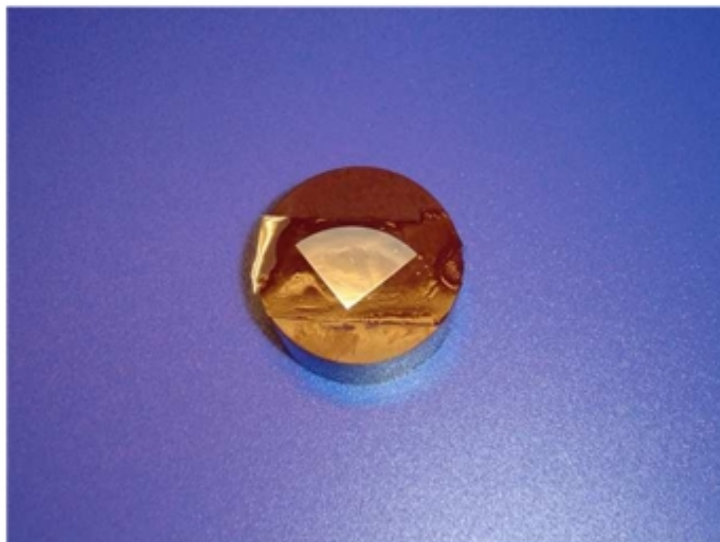

- Wait 2 to 3 minutes before remove the Replic sheet.
- Put the Replic sheet on a glass slide, by taking care that the part to be observed is in opposition with the glass slide.
- Fix the edges of the Replic sheet, with one adhesive tape, to the glass slide to maintain it perfectly.
- Observe the Replic on a microscope in reflected light.

Kemet International Limited

Parkwood Trading Estate, Maidstone, Kent, ME15 9NJ, UK

Tel: 01622 755287: Fax: 01622 6709152: Email: sales@kemet.co.uk: www.kemet.co.uk