


## Cartridge RS 7 / 30T Instructions for use

### Necessary equipment:

- Applicator ref 19043
- Cartridge 50 ml RS7 or RS 30 T ref 19040 or ref 19041
- Static mixer - Pack of 30 units ref 19042

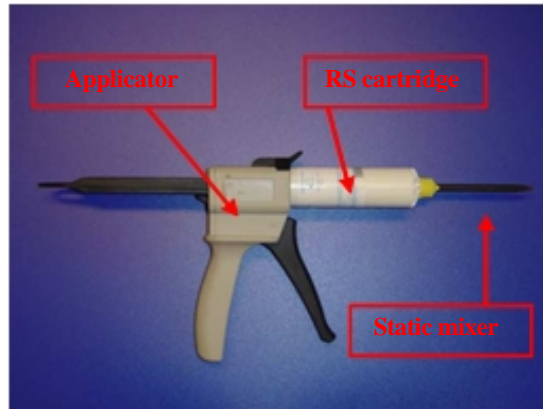


### Choice of the cartridge and characteristics:

- RS 7 : For horizontal surface. Working life = 1 minute, cure time = 7 minutes.
- RS 30 T : For vertical or sloping surface. Working life = 7 minute, cure time = 30 minutes.

### Using :

- Install a cartridge on the applicator.
- Install a static mixer on the cartridge.
- Press the trigger. Make a line of 10 cm on a paper (Homogenization of the mixture in the mixer).
- Apply the product to the surface to be controlled by pressing the trigger :

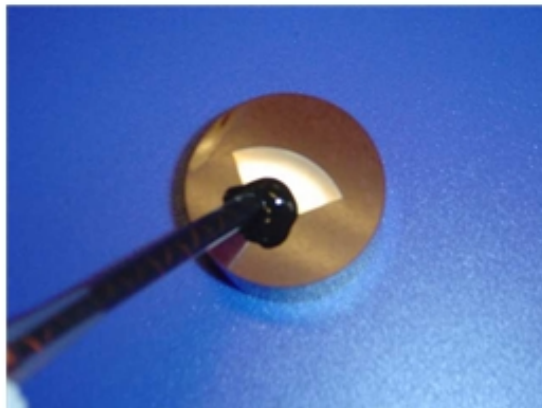

- After curing, remove the replic, ready to be observed under a microscope.
- Do not remove the static mixer. Thanks to that static mixer, the product contained in the cartridge is protected.
- For a next use, remove the static mixer and install a new one.

### Kemet International Limited

Parkwood Trading Estate, Maidstone, Kent, ME15 9NJ, UK

Tel: 01622 755287; Fax: 01622 6709152; Email: [sales@kemet.co.uk](mailto:sales@kemet.co.uk); [www.kemet.co.uk](http://www.kemet.co.uk)